

How to Access Multiple Books on a Cartridge

When you receive a cartridge with multiple books on it, you can access the books in one of two ways:

Listening to Books in Order (Sequential Play)

1. When you reach the very end of the book, press the green, rectangular Play button:



2. The machine will then prompt you to, "Press the Play button again to go on to the next book." Go ahead and press the play button again, and the machine will start playing the next book.



Accessing Bookshelf Mode (Skipping over books, etc.)

1. Press and hold the green, rectangular Play button for about 3 seconds until the player beeps and says “Bookshelf” and announces the number of books on the cartridge.



2. Tap the Rewind or Fast Forward button, located on each side of the green, rectangular Play button, to select the next book. The book title will be announced. To advance to the next title, just press the Fast Forward button again, or tap the rewind again to go to the previous book. You will know you are at the last book on the cartridge when you hear a double beep.



3. Once you get to the title you want to read, press the green, rectangular Play button. The player will exit Bookshelf Mode and start playing the selected title.



[Note: The player will “remember” your current position in each book even if you move to other books. You can read part of one book, then read part of another book, then come back and continue with the first book, if you like.]